



www.gotowti.com

An ISO 9001:2000 Certified Company



Wireless Technology, Inc.

**RCU
Rack-Mount
Control Unit**

*Installation and
Operation Manual*

TABLE OF CONTENTS

INFORMATION	Page 3
PRODUCT WARRANTY AND REPAIR	Page 4
SAFEGUARDS	Page 6
INTRODUCTION	Page 7
FRONT PANEL FEATURES	Page 9
PINOUT CONNECTORS	Page 10
REAR PANEL FEATURES	Page 11
CABLES AND CONNECTIONS	Page 12
PIN FUNCTIONS	Page 13
TECHNICAL SPECIFICATIONS	Page 14

INFORMATION

FCC NOTICE

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1.) This device may not cause harmful interference.
- 2.) This device must accept any interference that may be received, including interference that may cause undesired operation.

READ THIS MANUAL

Every effort has been made to insure that this WTI system is of the highest quality. This product has been carefully inspected to comply with rigid quality standards before shipment to you. In consideration of your investment and the desire to obtain full performance capability engineered into your new WTI product, we recommend that you read this manual before attempting to operate your system.

FOR MORE ASSISTANCE OR MORE INFORMATION

WTI (Wireless Technology, Inc.)
2064 Eastman Avenue, Suite 113
Ventura, CA 93003-7787

TOLL FREE. 866/gotowti (468-6984)
TEL. 805/339-9696
FAX. 805/339-0932

EMAIL: sales@wirelesstech.com

INTERNET: <http://www.gotowti.com> or
<http://www.wirelesstech.com>

The software / firmware furnished with the equipment is confidential to and is copyrighted by *Wireless Technology, Inc.* (WTI) It is not to be copied or disclosed in any manner without the consent of *Wireless Technology, Inc.* (WTI). The software/firmware is furnished to the purchaser under a license for use on a single system.

Information furnished by *Wireless Technology, Inc.* (WTI) is believed to be accurate and reliable. However, no responsibility is assumed by *Wireless Technology, Inc.* (WTI) for its use or for any infringements of other rights of third parties, which may result from its use. No license is granted by implications or otherwise under any patent or patent rights of *Wireless Technology, Inc.* (WTI)

©2010 Wireless Technology, Inc. (WTI)
All rights reserved.

PRODUCT WARRANTY AND REPAIR

PRODUCT WARRANTY

We appreciate your purchase of *Wireless Technology, Inc.* (WTI) security products. We take pride in the quality of our products and have manufactured each new WTI product to exacting quality standards. In normal use, it will provide you with years of satisfactory performance. However, should you experience difficulty; you are protected under the provisions of this warranty.

WTI warrants to the original user a product that is free of defects in materials and workmanship in normal use. WTI warrants to the original user that WTI's products will be free of defects in materials and workmanship in normal use for a period of 12 months from the date of sale. WTI's obligation under this warranty shall be limited to the repair, including all necessary parts and the cost of labor connected therewith, or at our option, the replacement of any product that shows evidence of a manufacturing defect within the warranty period.

This warranty is extended to all WTI products purchased and used within the United States of America and is valid only when service is rendered by the authorized WTI (*Wireless Technology, Inc.*) Warranty Station.

This warranty shall not apply to appearance or accessory items including, but not limited to, knobs, connectors, cabinets and connecting cables. This warranty shall not, in addition, apply to repairs or replacements necessitated by any cause beyond the control of WTI including, but not limited to, acts of nature, improper installation, misuse, lack of proper maintenance, accident, voltage fluctuations, unauthorized repairs or modifications.

This warranty becomes void in the event serial numbers are altered, defaced or removed, or an attempt is made to field service or alter performance of any WTI products.

WTI reserves the right to make changes in design, or to make additions to, or improvements upon, products without incurring any obligation to install the same on products previously manufactured.

The foregoing is in lieu of all other warranties expressed or implied and WTI neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale of our products. In no event shall WTI or its Authorized Dealers be liable for special or consequential damage arising from the use of this product, or any delay in the performance of this warranty due to causes beyond its control.

PRODUCT WARRANTY AND REPAIR

REPAIR AUTHORIZATION

Please contact *Wireless Technology, Inc.* (WTI), to obtain a repair authorization number (RA) and provide the following information:

- 1.) Product Model & Serial Numbers
- 2.) Date of shipment, purchase order number, sales order number or WTI invoice number.
- 3.) Details of the defect or malfunction. If there is a dispute regarding the warranty or product, which does not fall under the warranty conditions stated within the description of the written warranty, please include a written explanation with the product when returned.

SHIP FREIGHT PRE-PAID TO:

WTI (*Wireless Technology, Inc.*)
2064 Eastman Avenue, Suite 113
Ventura, CA 93003-7787
TEL 805/339-9696
FAX 805/339-0932

RETURNS

No unauthorized returns will be accepted. All returns must have an authorized (RA) number issued by the factory (CA number if returned for credit and RA number if returned for repair). Products returned for repair or credit will be rejected if no authorization number has been issued or freight has not been pre-paid. All merchandise returned for credit will be subject to a 20% restocking and refurbishing charge.

IMPORTANT SAFEGUARDS

- 1.) Read Instructions. It is important to read all safety and operating instructions before installing or using this equipment.
- 2.) Retain Instructions. Retain this manual and any supplements for future reference.
- 3.) Follow Instructions. Follow all instructions herein for use of this equipment.
- 4.) Heed all warnings. Adhere to all warnings on the equipment, and in this manual.
- 5.) To reduce the risk of electric shock or equipment damage, work on the unit only when the power is shut off and is unplugged from its power source to prevent accidental activation. Also take precautions to avoid contact between the equipment and other electrical wires or power sources that may be present at the installation site.



INTRODUCTION

GENERAL INFORMATION

WTI's RCU Rack Mount Control Unit provides the interface between a remote host control system and the camera. It also provides local control functions at the camera site during installation and maintenance, and functions as a permanent controller for non-remotely controlled mobile applications.

The RCU typically operates at 115 V AC. However, the internal power module is capable of operating from 90 V AC to 264 V AC, 47 to 63 Hz. Units modified with a different power plug may operate at other voltages in this range. However the camera connected to the RCU unit receives the same operating voltage as is applied to the RCU. So be sure that camera is intended to operate at that particular voltage.

OPERATIONAL MODES

For fixed site installations WTI's RCU normally operates in the Remote Host mode. When in Host mode all control takes place from an operator's console located some distance from the RCU and camera location. During setup and maintenance the Local mode is used to control camera position and lens settings via RCU front panel controls. This usually requires a local viewing monitor to be connected to the video output connector on the front panel of the unit.

In Host mode, communications between the RCU and the control system can be any one of many various protocols. The NTCIP protocol requires a version of the RCU that offers this feature. The camera is programmed with a site address for use by the host system. The camera address is irrelevant to the RCU. The RCU communicates with the camera using a secondary broadcast address that the camera also recognizes.

When in Local mode all host communications, and thus host control, is terminated. Front panel control features on the RCU become active. The front panel RS-232 connector can then be used to communicate with a local PC or hand held controller for updating camera firmware or other maintenance tasks. Be aware that the camera/dome must operate at the same power input voltage that is powering the RCU.

LOCAL OPERATION

Local mode is selected by the left-most front panel switch. When in local mode the RCU front panel controls motion and lens settings of the camera, and the rear panel remote Host connections are disabled. The RCU will revert back to the Remote Host mode after 5 minutes of front panel inactivity.

OPERATION MODES

The Local mode is also used when interfacing to a Laptop PC or hand held controller via the front panel RS232 connector. This configuration may be used to upgrade camera software or to perform other maintenance functions.

REMOTE OPERATION

Remote mode is selected by the left most front panel switch. When in remote mode, the remotely connected Host controls motion and lens settings of the camera via the rear connectors, and the front controls are disabled. Remote mode ports are provided for both RS-232 and RS-422 signal configurations. Note that only one or the other port may be used at a time.

HOST MODE PROTOCOLS

Various protocols can be used with the RCU. System (Host) protocols can communicate with the unit using either the rear panel RS-232 connector or RS-422 connector — except for NTCIP which only communicates through the RS-232 connector. Be aware that not all features may be supported by the attached camera.

Local control with the unit during setup and maintenance functions may use the front panel RS-232 connector and GUI control software. Graphical User Interface (GUI) software is available for setting the address and performing field tests for each camera site. This software is typically loaded onto a PC when intended for field use at camera locations. WTI's control units (HHC-SW and DTC-720) are ideal for use with setup and maintenance of the RCU.

HOST MODE NTCIP PROTOCOL

WTI's RCU can be ordered to offer NTCIP protocol communications at the rear panel RS-232 connector. The RS-422 connector should not be used when a Panel has an NTCIP module installed for the RS-232 connector.

FRONT PANEL FEATURES

Front Panel Features

Item	Group	Name	Function
1		LOCAL RS-232	Serial input for a laptop computer running GUI software or WTI HHC-SW hand-held controller to set up and maintain a camera.
2		VIDEO OUT	75Ω video output for a use with a local monitor while controlling the camera with the RCU.
3		POWER INDICATOR	Illuminates green when the rear (or front**1) panel power switch is set to the on position.
4	SWITCH LOC MODE	LOCAL CONTROL INDICATOR	Illuminates red when camera is being controlled by the front panel switches or LOCAL RS-232. Reverts to remote control after 5 minutes of inactivity.
5	SWITCH REM	REMOTE CONTROL INDICATOR	Illuminates green when camera is being controlled by rear remote host jacks. Disables front panel camera controls.
6	PAN/TILT SWITCHES	LEFT / RIGHT	Pans the camera left and right.
7		UP / DOWN	Tilts the camera up and down.
8	ZOOM SWITCH	TELE / WIDE	Causes the camera to zoom in (TELE) or out (WIDE) on the scene.
9	FOCUS	AUTO / MANUAL	Selects temporary manual control of the camera focus.
10		MANUAL INDICATOR	Illuminates red when manual control of focus is selected, which enables the FAR / NEAR switch operation.
11		FAR / NEAR	When enabled, manually controls the focus to farther away (FAR) or closer NEAR). NOTE: These manual adjustments remain valid until the camera position is changed, at which time the camera reverts to the AUTO FOCUS mode.
12	IRIS	AUTO / MANUAL	Selects temporary manual control of the camera iris.
13		MANUAL INDICATOR	Illuminates red when manual control of iris is selected, which enables the OPEN/CLOSE switch operation.
14		OPEN / CLOSE	When enabled, manually controls the iris to open or close. NOTE: These manual adjustments remain valid until the camera position is changed, at which time the camera reverts to the AUTO IRIS mode.
15	RESET	RESET SW	Recessed pushbutton switch to Reset the Camera and allow firmware upgrades via the Local RS232 connector. Contact WTI for further information.
16	RESET	RESET INDICATOR	Illuminates red during the reset mode. Automatically times out after 30 seconds of communication inactivity.
<p><i>Functions described above assume the camera has the capability described. All switches are momentary contact</i></p>			

PINOUT CONNECTORS

Pinout for Front and Rear Panel **RS-232** Connectors

PIN	Function
1	Not Used
2	RX
3	TX
4	Not Used
5	Ground
6	Not Used
7	RTS
8	CTS
9	Not Used
Connector: DB-9 Male Pins.	
Requires DB-9 Female mating connector.	

Pinout for Rear Panel **RS-422 or RS-485** Connectors

PIN	Function
1	TX +
2	TX -
3	Ground
4	RX +
5	RX -
6	Ground
7	Not Used
8	Not Used
9	Not Used
Connector: DB-9 Female Pins.	
Requires DB-9 Male mating connector	

Using the RS-422 connector on an NTCIP Panel is not a standard operating condition and this information is provided only for troubleshooting and maintenance purposes.

REAR PANEL FEATURES

MECHANICAL CHARACTERISTICS

WTI's RCU is constructed as a standard 1.75" panel in a 19" rack mount configuration. All operator controls appear on the front panel and standard system interconnections are located on the rear panel. During local control operations, a TV monitor may be connected via the BNC connector located on the front panel and a laptop or one of WTI's controllers (HHC-SW or DTC-720) may be connected to the RS-232, nine pin, D connector located on the front panel of the unit.

REAR PANEL FEATURES

Item	Name	Function
1	Power Switch	Depressed on the top is power on. Depressed on the bottom is power off. A green front panel indicator illuminates when power is on.
2	Line Cord	A permanently attached 5-foot line cord has a 3-wire grounded type plug for 115 V AC power.
3	16-Pin Circular Connector	Provides power video and serial data communications to the camera. Note: Camera power at this connector is identical to the RCU power (typically 115 V AC). Make sure the camera will tolerate this voltage.
4	RS-422 Connector	DB-9 female (socket) connector to the remote Host controller using RS-422 or RS-485 communications protocol.
5	RS-232 Connector	DB-9 male (pin) connector to the remote Host controller using RS-232 communication protocol. On an NTCIP version of the RCU this is the port that must be used.
6	BNC Connector	75 Ω video out. This connector supplies video from the camera. This video would typically be applied to a fiber optic or other type converter device for sending the camera video long distances back to an operator console.

CABLES AND CONNECTIONS

CAUTION

The power applied to the RCU is directly hard wired back out to the camera connector on the rear panel. Be sure the connected camera/dome will operate properly from this power.

CABLING REQUIREMENTS

1. One cable is required to connect between the camera and the rear of the RCU.
2. Either an RS-232 or RS-422 cable is required for host serial communications with the unit. Only one is required. Both rear panel connectors are active at all times, but only one can be used at a time. Never connect serial data to both connectors simultaneously. No damage to the unit will occur, but communications will be corrupted and unreliable.
3. A 75 Ω coaxial cable is required to connect video to the system interface device.
4. For setup and maintenance operations via the front panel, an RS-232 null modem serial cable is required to connect between the LOCAL RS-232 connector and a PC. This cable must have DB-9 female (socket) connector to mate with the LOCAL 232 connector on the front panel and typically also a DB-9 female (socket) connector at the PC 232 serial connector port.

CONNECTOR TX AND RX CONVENTIONS

The Tx+ Tx- and Rx+ Rx- notations for these RS-422 connectors and all other RS-422 connectors in a system using this notation cause much confusion for field installers. There is a tendency to want to connect Tx to Tx and Rx to Rx. Tx+ output of one piece of hardware should go to the Rx+ input of another. Tx- goes to Rx-. However, to add to the confusion Tx and Rx are not universally used notations for the same functions. Sometimes Command Out is used for Tx and Command In for Rx. Other naming conventions are also used among different equipment manufacturers and their cables. Because RS-485 provides bidirectional communications over the cable a connector can be an input at one moment and then an output milliseconds later (RS-485 half-duplex). Thus, the identifying labels that connectors and wires are assigned can be somewhat arbitrary. Wiring for RS-232 has the same situation. Tx typically goes to Rx and at the other end Rx to Tx.

PIN FUNCTIONS

PIN FUNCTIONS

16-pin Rear Panel Camera Connector

PIN	Function
1	Video, 75Ω
2	Video Ground
3	Data Ground
4	RX – (RS-422)
5	RX + (RS-422)
6	TX + (RS-422)
7	TX - (RS-422)
8	Not Used
9	Not Used
10	Not Used
11	Not Used
12	115 V AC Line (Hot)
13	115 V AC Neutral
14	Not Used
15	115 V AC Ground
16	Not Used


Required Camera Cable Characteristics

Conductor Function	Minimum Characteristics
VIDEO	RG-59/U (75Ω), 100 % copper conductor, 95% minimum braided shield.
DATA	2 pair, twisted with overall shield, 26 AWG minimum (Belden 8723 or equivalent).
POWER	3-conductor, 22 AGW to 16 AWG depending on length.
NOTE: For distances exceeding 750 feet, please contact one of WTI's "Solutions Specialists."	

TECHNICAL SPECIFICATIONS


ELECTRICAL	
Input Voltage	115 V AC with line cord provided. 90 to 264 V AC, 47 to 63 Hz; NEMA TS-2 Standard 2.1.2 when modified with other appropriate line cord (Attached camera must operate from input voltage used).
Input Power	20 VA for Panel alone; a typical attached camera/dome with heaters on may draw an additional 70 VA. Check camera/dome specifications for actual power.
MECHANICAL / ENVIRONMENTAL	
Finish	White powder coat face with black anodized body.
Dimensions	19.00" wide x 1.75" high x 8.00" deep.
Mounting	EIA Standard 19" cabinet, 1Rack Unit (RU).
Weight	5 lbs. (2.27 kg).
Ambient Temperature, Operating	-34 to 74 °C (-30 to 165 °F) NEMA 2.1.5.1 standard TS-2 (1998).
Ambient Temperature, Storage	-45 to 85 °C (-50 to 185 °F) NEMA 2.1.5.1 standard TS-2 (1998).
Humidity	Up to 90% relative humidity.

Note: Camera receives same AC power as the AC input power applied to the RCU. This is 115 V AC for a standard unit, but a standard or unit modified with a different line cord could operate at any voltage in the range from 90 to 264 V AC, 47 to 63 Hz. Be sure the camera is capable of operating from the unit input power.



TECHNICAL SPECIFICATIONS


RCU Unit Dimensions

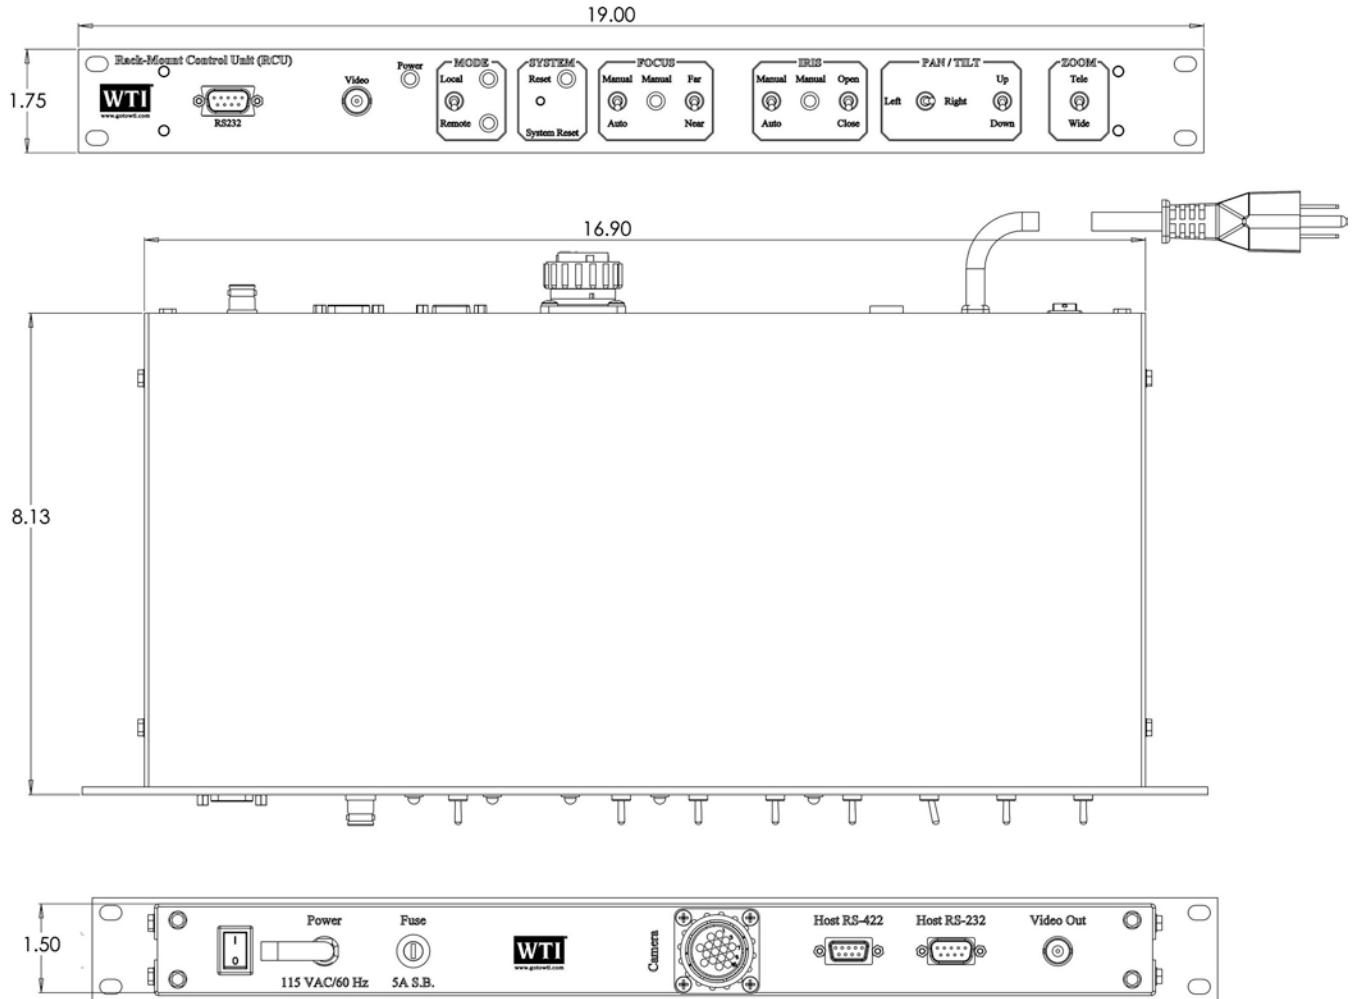



www.gotowti.com

An ISO 9001:2000 Certified Company

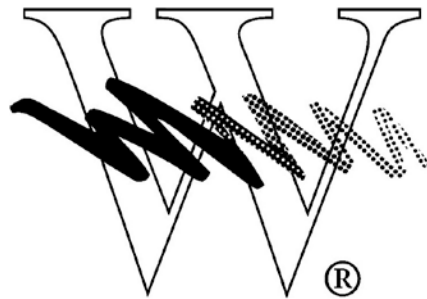

Wireless Technology, Inc.

Wireless Technology, Inc. (WTI)
2064 Eastman Avenue, Suite 113
Ventura, CA 93003-7787 USA
tel 805/339-9696 • fax 805/339-0932 • email: sales@wirelesstech.com
www.gotowti.com • www.wirelesstech.com

Due to Wireless Technology, Inc. (WTI) continuing efforts to engineer the best product that is most responsive to our customer's needs, the above specifications are subject to change without notice.